

CONTENTS OF F93 FASTENER KIT - MGA 1500/1600 RHD/LHD

To service misc. body fittings, brackets, electrical pieces, etc. this kit includes virtually all of the phillips head machine/sheet metal screws required to fasten electrical equipment, small brackets, cable clamps, etc. Nuts, flat washers and lock washers are also included. (all screws are phillips, pan head machine screws unless otherwise noted.) Thread sizes include 10-32, 1/4-28 and 5/16-24. Lengths are specified. Abbreviations include - LW lockwasher, HxN hex nut, FW flat washer, MS machine screw, SMS sheet metal screw, WS wood screw, FLT HD flat head, FIL HD fillister head, SLT HD slotted head, HX HD hex head, O.D. outer diameter. Quantities of fasteners are noted.



PAN HEAD



FILLISTER HEAD



OVAL HEAD



FLAT HEAD



HEX HEAD



PHILLIPS DRIVE

ELECTRICAL PIECES

Headlamp buckets to wings - 8 of each. #10 X 3/4", #10 LW, #10 HxN.
Front parking lamps/bases to wings (1500) - 6 of each. #6 FIL SLT HD MS, #6 LW.
Front parking lamps/bases to wings (1600) - 4 of each. #10 X 1/2", #10 LW.
Heater Box body to shelf - 7 of each. #10 X 5/8", #10 LW.
Defroster vent tube adapters to heater box body - 6 #6 X 3/8".
Control Box to fire wall - 2 of each. #10 X 1-1/4", #10 FW (large O.D.), #10 HxN.
Turn signal relay to fire wall - 2 of each. 1/4" X 5/8", 1/4" LW, 1/4" HxN.
Fuse box to fire wall - 2 of each. #10 X 5/8", #10 LW, #10 HxN.
Highbeam switch to bracket - 2 of each. #10 X 1/2", #10 LW.
Rear lamps to plinths (1500) - 4 of each. #10 X 5/8", #10 LW.
Rear lamps to plinths (1600) - as 1500 plus 6 #6 X 1/2" SMS - turn signal bases.
Rear lamps to plinths (Mk II) - 6 of each. #10 HxN, #10 LW.
Flasher to firewall - 1 of each. 5/16" X 5/8", 5/16" LW, 5/16" HxN.
Horn button to bracket - 2 of each. #6 X 5/8", #6 HxN, #6 LW.



BRACKETS & CLAMPS

Three large clamps for 4" air duct hosing - 3 of each. #10 X 1", #10 LW, #10 HxN.
Three loop clips - wiring harness to bonnet latch area. 3 of each. #10 X 1/2", #10 LW, #10 HxN.
Two loop clips - wiring harness to right inside front wheel arch area (to fender bolts). 3 5/16" HxN, 3 5/16" LW. (Also for gnd. wire).
Three loop clips* - therm. capillary pipe to fire wall/heaterbox shelf/RH wheel arch. 1500 routes via wheel arch, 1600 routes via shelf - 1 #10 X 1", 2 #10 X 5/8". 3 of each #10 LW, #10 HxN.
One loop clip* - wiring harness to fire wall - 1 of each. #10 X 1", #10 LW, #10 HxN.
Two loop clips* - oil pressure capillary pipe to fire wall/heaterbox shelf. 1 #10 X 1", 1 #10 X 5/8", 2 #10 LW, 2 #10 HxN.
Highbeam switch bracket to underside of heaterbox shelf 1500 - 3 of each. #10 X 1/2", FLT HD MS, #10 Finishing Washer, #10 LW, #10 HxN.
Highbeam switch bracket to chassis 1600 LHD - 3 of each. #10 X 1/2", #10 LW.
Highbeam switch bracket to chassis 1600 RHD - 3 of each. 1/4" X 5/8" HX HD MS, 1/4" LW, 1/4" FW.
One loop clip - wiring harness lead to highbeam switch - 1500 & 1600 RHD use 1 of each. #10 X 1/2", #10 LW, #10 HxN. 1600 LHD uses 1 #8 X 5/8" SMS.


*NOTE - these clips share mounting locations/screws. See diagram.

F93 Kit Cont.

- One loop clip - wiring harness to fire wall (LH side) - 1 of each. #10 X 5/8", 1 #10 LW, 1 #10 HxN.
- Bonnet and boot lid release rod guide plates to fire walls. 4 of each. #6 X 1/2", #6 LW, #6 HxN.
- Washer bottle bracket to heaterbox shelf (when fitted) - 2 of each. #10 X 5/8" HX HD MS, 2 #10 LW, 2 #10 HxN.
- Fascia panel support braces (no heater control panel fitted) - 8 of each. 8 #10 X 5/8", 8 #10 LW, 8 #10 FW.
- Accelerator cable stop bracket to toeboard support panel. 2 of each. #10 X 1/2", 2 #10 LW, 2 #10 HxN.
- Six loop clips (double style) wiring harness and battery cable to underside RH Chassis. 6 of each. #10 X 1/2", #10 LW, #10 HxN.
- Two loop clips - wiring harness to RH rear wheel frame arch area. 2 of each. #10 X 1/2", #10 LW, #10 HxN.
- Three clips - handcrank to boot wall - 3 of each. #10 X 1/4", #10 LW.
- Two chromed braces - rear of hood to tonneau. 2 #10 X 1/4", 2 #10 X 3/8", 4 #10 LW.
- Petrol tank extension pipe retainer and seal to boot floor. 3 of each. #10 X 5/8", #10 LW, #10 FW (large O.D.)
- Two loop clips - brake pipe and cable to RH battery rack. 1 of each. #10 X 1", #10 LW, #10 distance pc./spacer, #10 HxN.

MISCELLANEOUS

- Aluminum cover panels to chassis sides. 6 #8 FLT HD SMS, 10 #10 SMS, 10 #10 FW.
- Transmission extension cover to tunnel. 8 of each. #10 X 3/8", #10 FW - small O.D.
- Latches and pulls to door. 10 of each. #10 X 1/2", #10 LW, #10 FW, 2 #10 HxN.
- Chassis and patent plates to heaterbox shelf. 6 of each. #6 X 1/2", #6 LW, #6 HxN.
(some cars used pop-rivets to fasten these plates - not included)
- Striker pillar face plate and rubber buffer tapping plates. 10 #10 X 1/2" Oval HD MS, 4 #8 Oval HD SMS.
- Buffers, bonnet surround. 10 of each. #6 X 1/2", #6 LW, #6 HxN.
- Wood battens to bonnet and boot lid. 4 #6 X 3/8" WS.
- Boot lid latch and strike to floor and lid. 3 #10 X 1/2" FLT HD MS, 2 #10 X 1/2", 5 #10 LW, 3 #10 FW, 3 #10 HxN, 1 #6 X 1/2" SMS.
- Fascia panel to body - 3 of each. #10 X 5/8", #10 LW, #10 FW - 3/4" O.D.

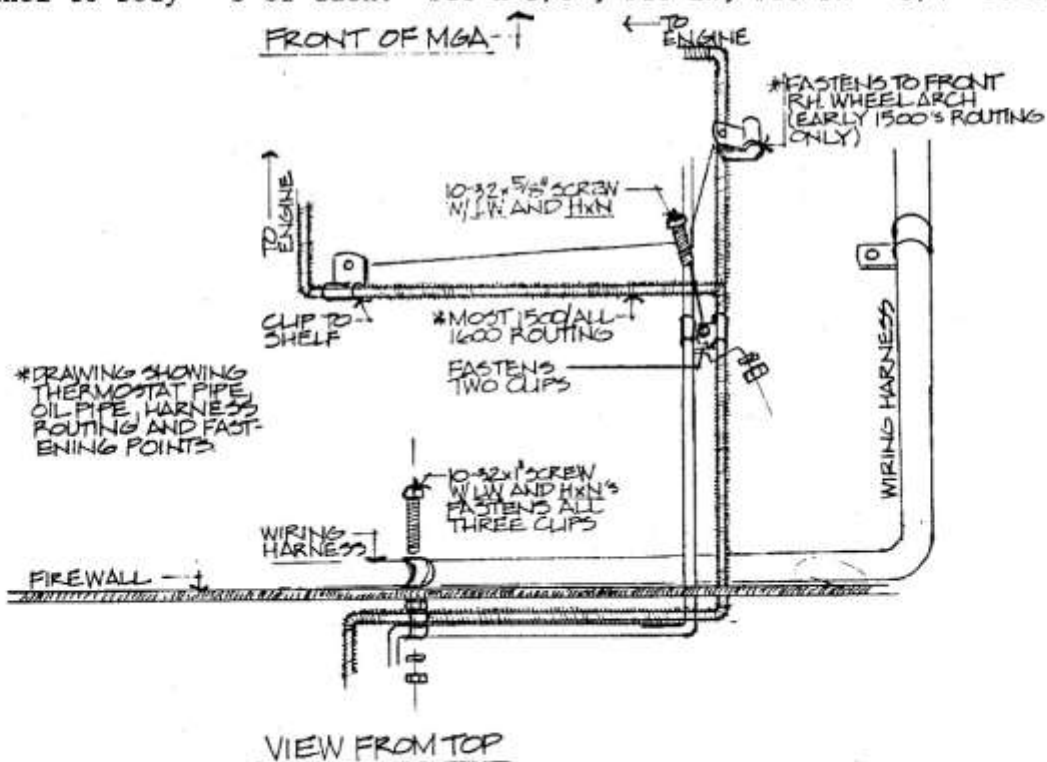

*Check for punched hole in heater box shelf or wheel arch to determine original routing for your vehicle.